

# Instructions for repair

1. Try shooting jacket and pants always with shooting underwear and shooting boots **on**
2. Check the places for the buttons -> always mount buttons and change places if needed
3. Go into shooting position
4. If you think alterations are needed:
  - 4.1 take photos in shooting position
    - 4 photos, one in each direction; from front, back, right and left where you can see the whole product, see example photos below.
    - Additionally you can add photos of problem area. Do not take such photos too close.
    - 3-position and standing jackets and pants: arms in standing position. If problem is in kneeling or in prone position take extra photos of problem in each position.
    - Photos of the prone jackets: arms much higher, over shoulder height while standing or photos in prone position.
  - 4.2 Fill in repair form
    - on the figures of the jacket/pants you can mark the problem area and explain what the problem is.
  - 4.3 Send pictures and repair form to [teemaline@thune.fi](mailto:teemaline@thune.fi)
5. We will study the case and we will contact you about how we will proceed.

Repair photos of jacket



Repair photos of pants



Extra photos of problem area

